


**Front and rear door warning lamps, glove box light, consumer switch-off**

- S157 - Consumer switch-off fuse
- T21a - 21-pin connector, on left B-pillar
- T21b - 21-pin connector, on right B-pillar
- T29a - 29-pin connector, on left A-pillar
- T29b - 29-pin connector, on right A-pillar
- W6 - Glove box light
- W30 - Door warning lamp, driver's side
- W36 - Door warning lamp, front passenger's side
- W37 - Door warning lamp, rear left
- W38 - Door warning lamp, rear right
- 33 - Earth point, behind dash panel, right
- 238 - Earth connection -1-, in interior wiring harness
- 277 - Earth connection -3-, in engine compartment wiring harness
- B128 - Connection (luggage compartment light), in interior wiring harness
- B179 - Positive (+) connection (consumer switch-off), in interior wiring harness

# Sharan

## Current Flow Diagram

### No. 5 / 4

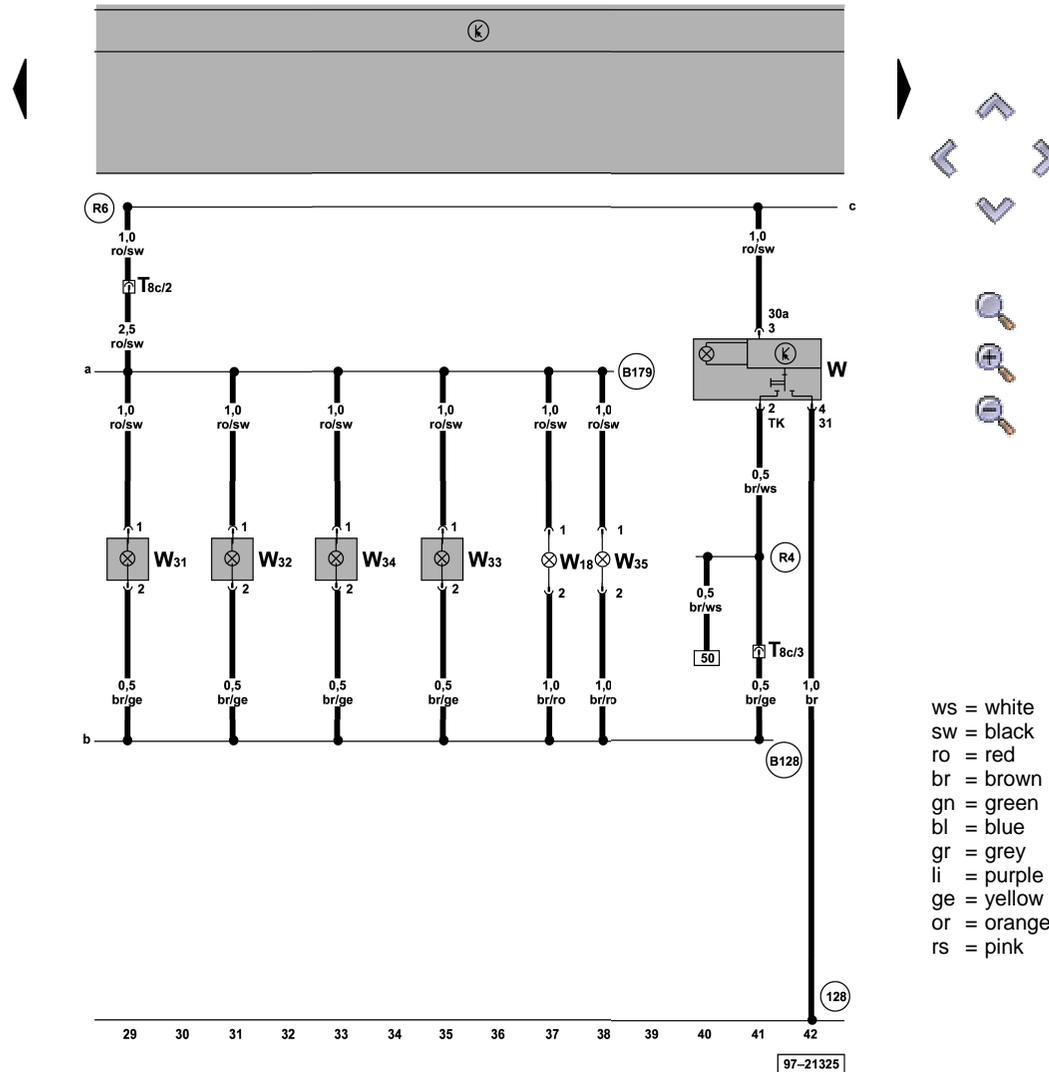

#### Front interior light, front and rear entry lights, luggage compartment lights


- T8e - 8-pin connector, behind left A pillar/dash panel trim
- W - Interior light, front
- W18 - Luggage compartment light, left
- W31 - Front left entry light
- W32 - Rear right entry light
- W33 - Rear left entry light
- W34 - Rear right entry light
- W35 - Luggage compartment light, right
- 128 - Earth connection -1-, in interior light wiring harness
- B128 - Connection (luggage compartment light), in interior wiring harness
- B179 - Positive (+) connection (consumer switch-off), in interior wiring harness
- R4 - Connection -1-, in interior light/door contact switch wiring harness
- R6 - Positive (+) connection -1-, in interior light wiring harness

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange  
 rs = pink

# Sharan

## Current Flow Diagram

### No. 5 / 5

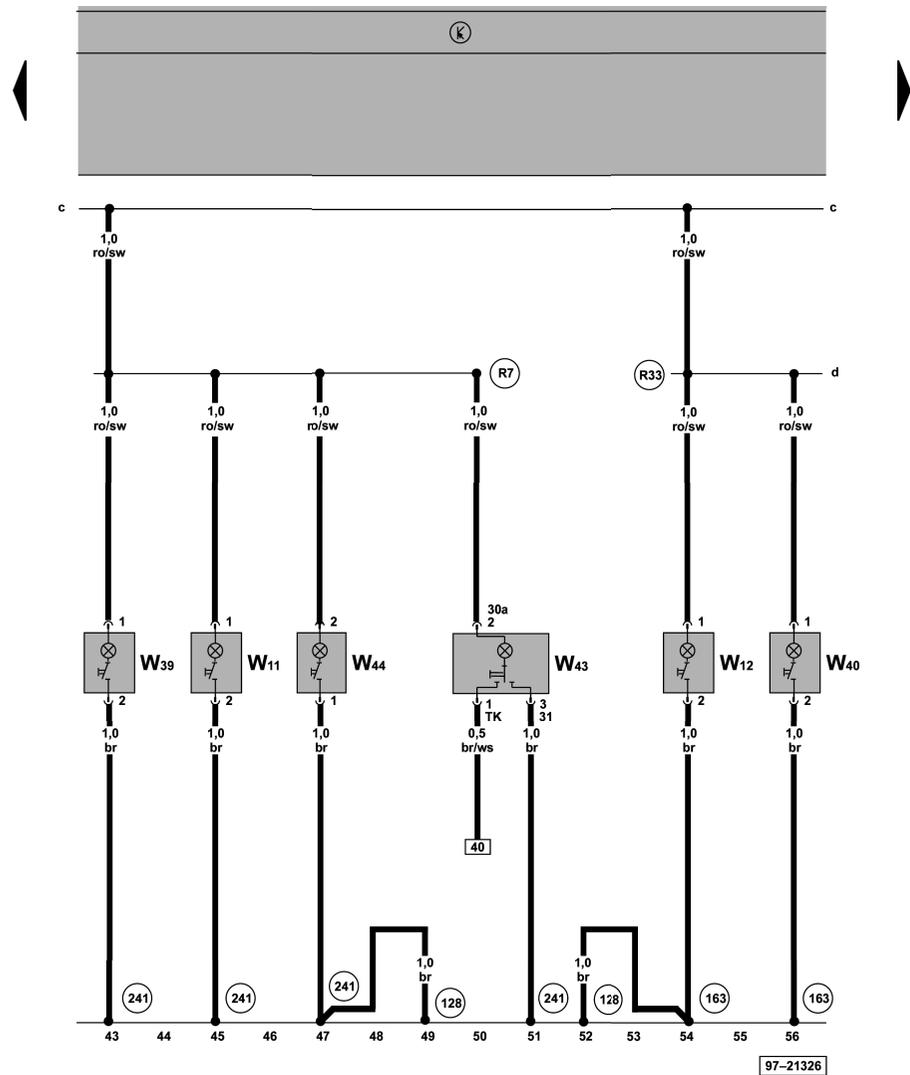

**Rear interior light, centre and rear reading lights**


- W11 - Reading lamp, rear left
- W12 - Reading lamp, rear right
- W39 - Left centre reading light
- W40 - Right centre reading light
- W43 - Rear interior light
- W44 - Rear centre reading light
- 128 - Earth connection -1-, in interior light wiring harness
- 163 - Earth connection -2-, in interior light wiring harness
- 241 - Earth connection -3-, in interior light wiring harness
- R7 - Positive (+) connection -2-, in interior light wiring harness
- R33 - Positive (+) connection -3-, in interior light wiring harness

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = purple  
 ge = yellow  
 or = orange  
 rs = pink

# Sharan

## Current Flow Diagram

### No. 5 / 6

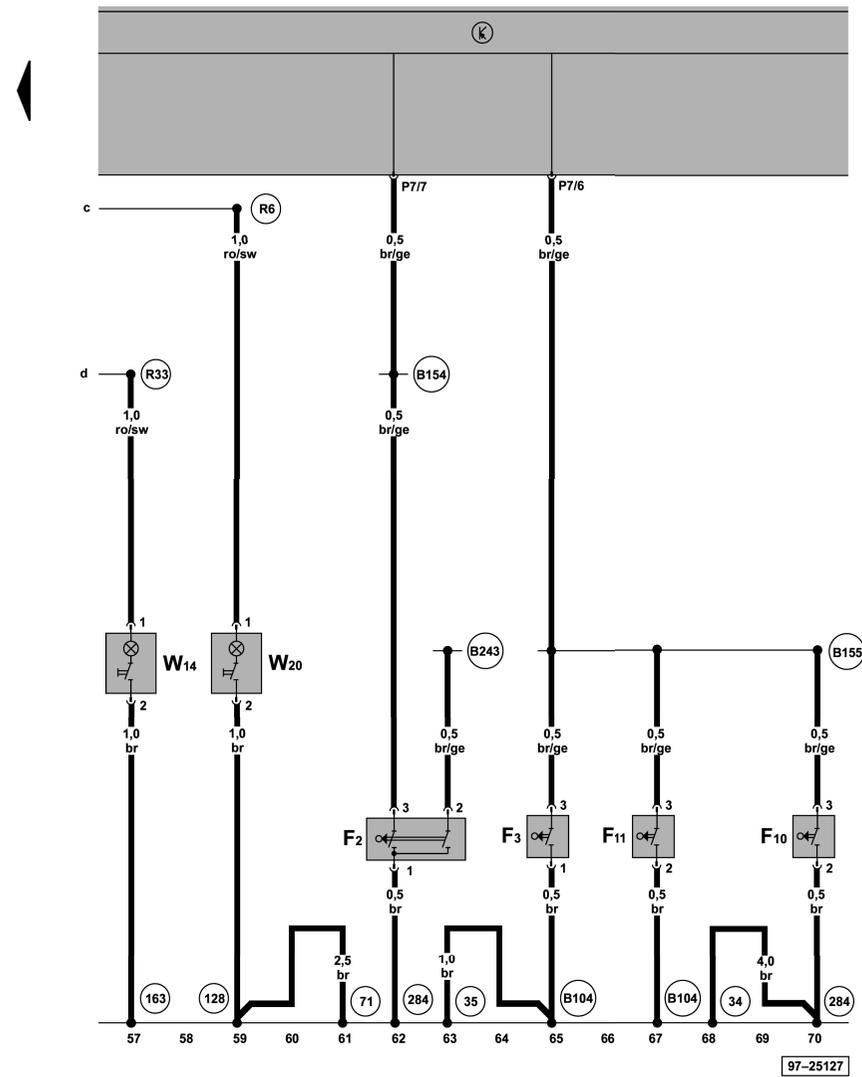

#### Illuminated make-up mirror, front and rear door contact switch

- F2 - Door contact switch, driver's side
- F3 - Door contact switch, front passenger's side
- F10 - Rear left door contact switch
- F11 - Rear right door contact switch
- W14 - Illuminated make-up mirror, front passenger's side
- W20 - Illuminated make-up mirror, driver's side
- 34 - Earth point, under driver's seat
- 35 - Earth point, under front passenger's seat
- 71 - Earth point, front roof rail
- 128 - Earth connection -1-, in interior wiring harness
- 163 - Earth connection -2-, in interior light wiring harness
- 284 - Earth connection -6-, in interior wiring harness
- B104 - Earth connection (rear right), in interior wiring harness
- B154 - Connection -1- (DC), in interior wiring harness
- B155 - Connection -2- (DC), in interior wiring harness
- B243 - Connection -4- (DC), in interior wiring harness
- R6 - Positive (+) connection -1-, in interior light wiring harness
- R33 - Positive (+) connection -3-, in interior light wiring harness

# Sharan

## Current Flow Diagram

### No. 5 / 7